


Draining Oil Guide CLATUU α

Draining Oil

Proceed when error message is displayed as shown.

Ensure to turn the System OFF before proceeding.

Please wait 10 – 15 min. for approximately 200ml of oil to drain completely from the System.

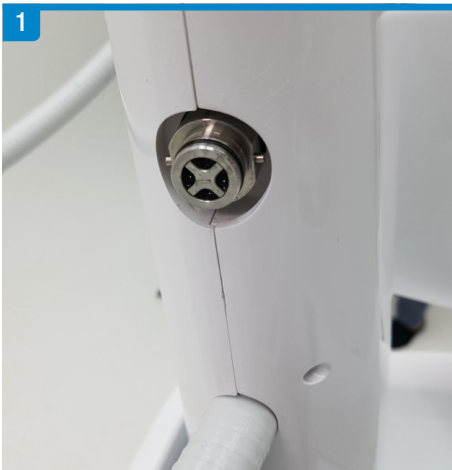


1 Check the outlet of the Oil Receiver located behind the Arm Stand.



2 Prepare to connect the Oil Receiver to the outlet.



3 Align and insert the input of the Oil Receiver into the outlet.

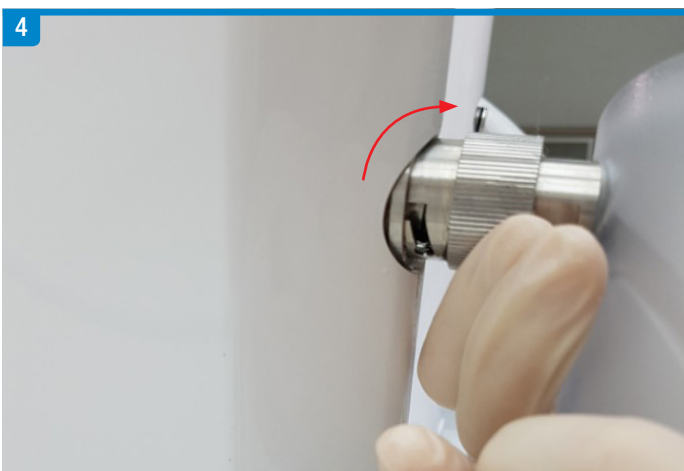

4 After the input of the Oil Receiver is inserted into the outlet, turn the input right to ensure a firm connection.



5 Check that the oil is draining properly through the input of the Oil Receiver.

Keep the Oil Receiver connected until oil is completely drained from the System. After a successful drainage, remove the Oil Receiver from the Arm Stand in reverse sequence.