

- **Top up water level** undo 2 silver bolts on the lower back of the Clatuu, attach funnel with nozzle to the 'water' inlet, ensure vent inlet is also open. Water is full when water starts to come out of vent outlet. *(There is no water level gauge)*
- **Dust/vacuum all filters** and fans on the Clatuu body to ensure no dust build up
 - **Empty Gel Jars** on the side of the Clatuu is a panel door with 2 screws, open the door by unscrewing and then turn the silver handles, any gel will drain into the trays, these can then be empties and cleaned

**Ensure the silver handles are returned to lock or suction can be impaired

Cleaning Clatuu Cups – is there is loss of suction or dried gel build up in the cup suction opening the following is advised;

- 1 Turn the cup upside down
 - 2 Activate suction by turning on Clatuu cup
 - 3 Slowly pour warm water into the cup with suction activated
- 4 Repeat pouring water a few times to ensure thorough cleaning
- 5 Empty side jars, as the water will fill quickly in these
- ** Ensure water is only poured into cup as spillage can affect cooling plates on the side of cup.













